



AH-1W Cobra interior set

(for Revell, Tamiya, Italeri kit)


AC 72028

1/72

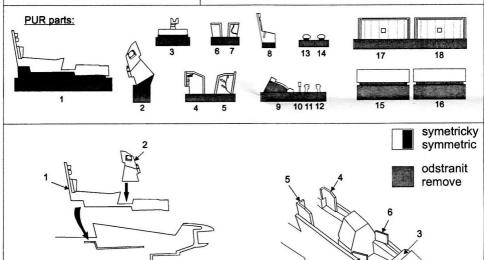

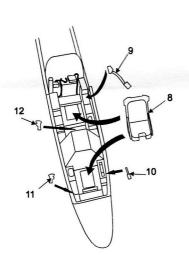

We recommend to make a hole according to size of the resin part.



Left side - parts no. 15, 17 Right side - parts no. 16, 18

Resin parts No. 13, 14 are first - aide kit. Place recommended according to photographs.

Assembling according photos is recommended.

www.armycast.cz